

Mixing Formula

ALWAYS follow the formula manufacturer's instructions for mixing formula and water.




- 1 Add water**
Use the markings on the side of the pitcher to measure your desired amount.



- 2 Add Formula Powder**
Always follow formula manufacturer's powder to water mixing ratio.

Tip: for powders that float
If your formula powder floats on top of the water, use the wand to push it down for better mixing.

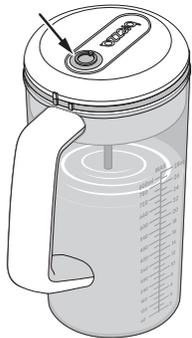

- 3 Place Lid on Pitcher press the Power Button**
Push once to turn on, allow to mix for 1 minute, then press again to turn off.*

- 4 Pour mixed formula into bottles & store them in the refrigerator**



Tip for mixing smaller amounts of formula:
Press the power button lightly & repeatedly to pulse mix. This is especially helpful to minimize bubbles when the level of formula is less than 16oz/410ml in the pitcher.

*Some formula powders, especially hypoallergenic varieties that are inherently difficult to mix, may clump. Warm water may help dissolve these powders. Make sure prongs on wand are completely submerged for best mixing.

babybrezza®

one step™
formula mixer




Instructions

ALWAYS use boiled, cooled water or bottled water suitable for infant formula preparation.

DISTRIBUTED BY: ELFE JUVENILE PRODUCTS
2520 AVE MARIE-CURIE, SAINT-LAURENT (QC) H4S 1N1
service@elfe.ca | www.elfe.com | 1-800-667-8184

©2018 Baby Brezza Enterprises LLC - 1 East 33rd Street, New York, NY 10016

One Step™ Formula Mixer Parts

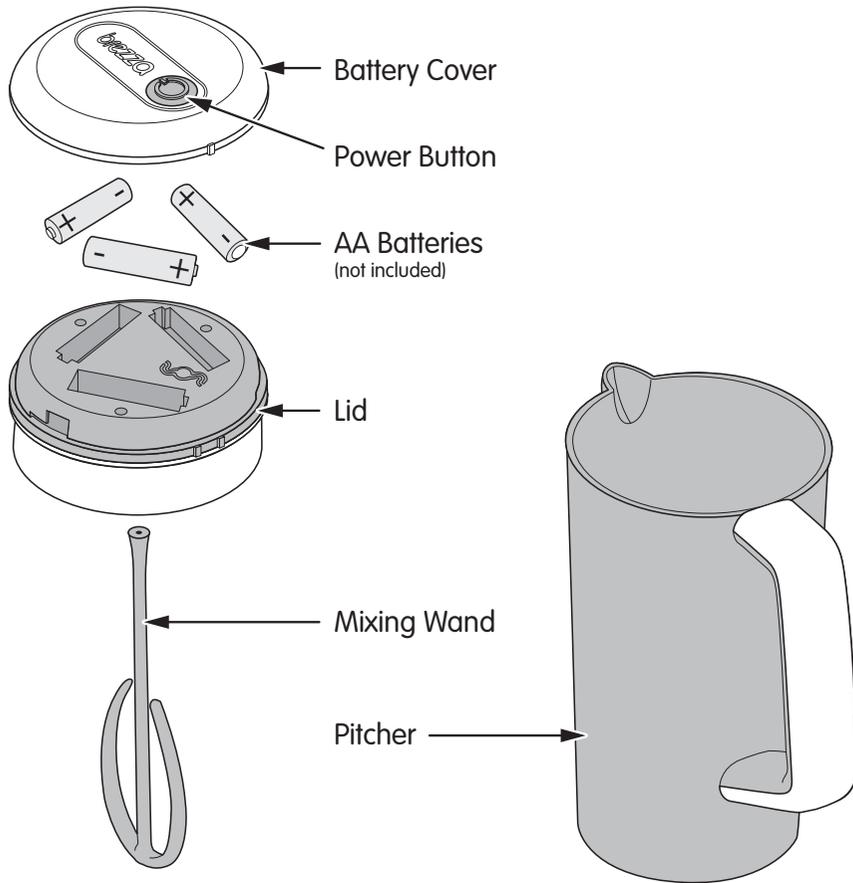


Cleaning

- Before each use, wash Pitcher, Mixing Wand and bottom of Lid in warm, soapy water. **Do not immerse the Lid in water.** Mixing Wand and Pitcher are top-rack dishwasher-safe.
- **CAUTION: The lid contains electronics, please take note of the following:**
 - Do not immerse the Lid in water or other liquid.
 - Do not place the Lid in a dishwasher.
 - Note: If the lid is accidentally immersed and water gets inside, remove battery cover & batteries, wipe with a dry cloth & allow to dry completely before next use.

Installing Batteries

Please note: Rechargeable batteries will need more frequent charging if the mixer is stored in the fridge.

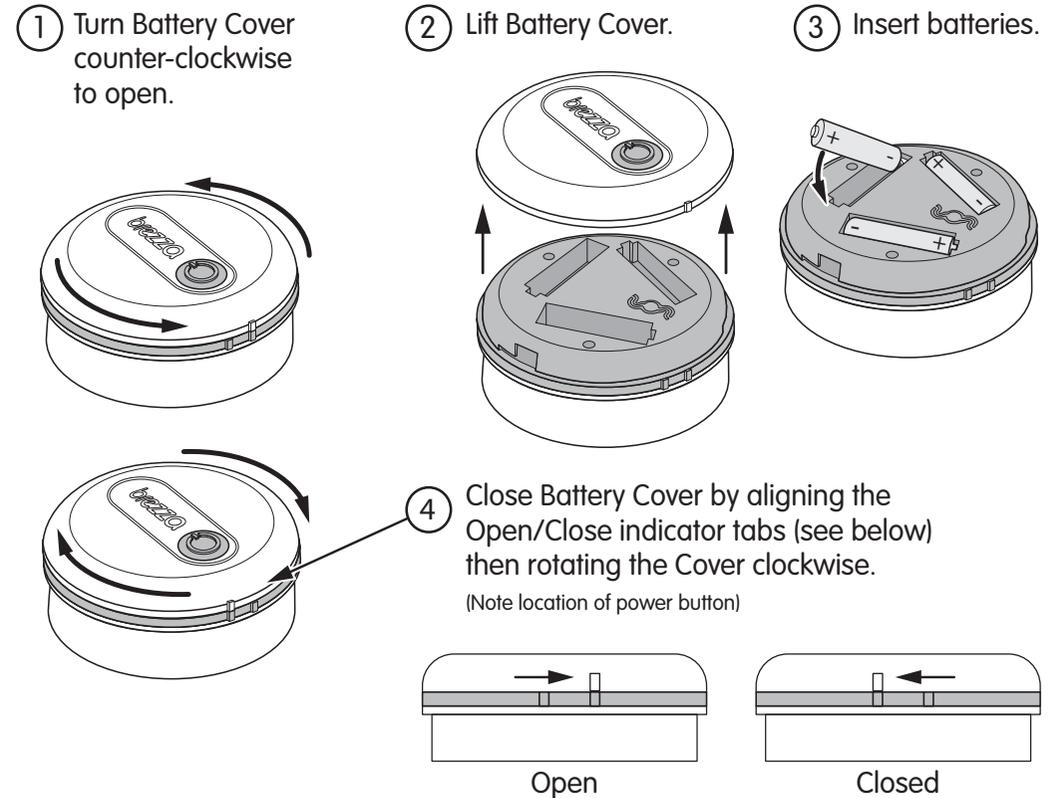

Removing & Installing the Mixing Wand

The Wand can be removed for cleaning.

