

babybrezza® Customer Service

If you are experiencing problems with your Baby Brezza Formula Pro® Advanced WiFi, please call Baby Brezza Customer Service at 1-800-667-8184 or email at: service@elfe.ca before returning the product to the store you purchased it at so that we can offer you our best service customized to your particular situation.

Limited 1-Year Warranty

The limited warranty is valid only on products bought through authorized resellers and used in Canada. Buying through an unauthorized reseller or using this product outside of Canada automatically voids this warranty. This warranty is available to consumers only. You are a consumer if you own a Baby Brezza Formula Pro® Advanced WiFi that was purchased at retail for personal, family or household use. Except as otherwise required under applicable law, this warranty is not available to retailers or other commercial purchasers or owners. We warrant that your Baby Brezza Formula Pro® Advanced WiFi will be free of defects in material or workmanship under normal home use for one year from the date of original purchase. Customer will be required to present original proof of purchase in order to obtain the warranty benefits. In the event that you do not have proof of purchase date, the purchase date for purposes of this warranty will be the date of manufacture. If your Baby Brezza Formula Pro® Advanced WiFi should prove to be defective within the warranty period, we will repair it or, if we consider it necessary, replace it.

To obtain warranty services, please call Customer Service at:
1-800-667-8184 or write to: service@elfe.ca.

This product may be covered under one or more of the following including U.S. Patent No. 8,584,901, Canada Patent No. 2,842,603, China Patent No. CN103874441, Australia Patent No. 2011374309, Spain Patent No. E52473790B2 and pending patent application(s) in the U.S. and other countries.

babybrezza®

formula pro®
advanced

wifi

Instructions for set-up, use and cleaning



elfe.com

© 2020 Baby Brezza Enterprises LLC

Please read fully to ensure your Formula Pro® Advanced WiFi works properly every time.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should be followed, including the following:

1. Read all instructions before using.
2. Do not touch hot surfaces.
3. To protect against electric shock and injury to persons, do not immerse cord, plug, or appliance in water or other liquid.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are closely supervised and instructed concerning use of the appliance by a person responsible for their safety. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
5. Turn off and unplug the appliance from the outlet when not in use, before assembling or disassembling parts and before cleaning. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Contact the manufacturer at their customer service telephone number for information on examination, repair, or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause fire, electric shock or injury.
8. Use on level surface and be sure there is no debris under the unit and the rubber wheels are touching the surface.
9. Household use only. Do not use outdoors.
10. Do not let cord hang over edge of table or counter, or touch hot surfaces.
11. Do not place on or near hot gas or electric burner, or in a heated oven.
12. Do not use appliance for other than intended use.
13. Do not attempt to use the machine without water in the water tank.
14. This appliance has a polarized plug (one blade wider than the other). To reduce risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
15. A short power-supply cord is provided to reduce risks of becoming entangled in or tripping over a longer cord. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use. If using the machine with an extension cord, make sure the cord is the proper electrical rating for the machine. The extension cord should be arranged so that it does not drape over a counter top or tabletop, where it can be pulled on by children or tripped over unintentionally.
16. Before serving make sure formula mixture is at safe temperature for baby.
17. Avoid contact with moving parts. Never remove powder container, powder container lid, funnel or water tank while machine is in operation.
18. Please note that changes or modifications of this product is not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Do not disassemble or open base of machine.
19. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off & on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
20. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 - (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING:

- Set-up & cleaning is critical to the function of your Formula Pro® Advanced WiFi. Please follow all instructions properly.
- Always use distilled or boiled water cooled to room temperature.
- Never pour boiling/hot water in water tank.
- Unboiled tap water and/or unsterilized baby bottles can potentially lead to adverse effects for the health of your baby. Use purified water suitable for infant formula preparation.
- Only prepare one bottle at a time, feed immediately & follow all instructions carefully.
- Do not keep leftover formula mix. If your child was born premature, with low birth-weight or is immune deficient, please consult your pediatrician before using this machine.

TECHNICAL DATA
Supply Voltage: 120V ~ 60Hz

Model: FRP0066

Current: 2.5A
Heater Power: 260W

Save these instructions

Attention: Don't take anything apart yet. **Follow these steps before doing anything else.**

- Place the Formula Pro® Advanced WiFi on the counter or other level surface and turn it around so the back is facing you.
- Remove the water tank from the back of the machine, wash it with warm soapy water and rinse thoroughly, then dry.
- Fill water tank with bottled water suitable for infant formula preparation, or boiled water, cooled to room temperature.
- Place water tank back on base, turn the machine around so the front is facing you and then plug it in. The machine will turn on and the LCD screen will light up.
- The machine will beep once to tell you it's powered on. You'll also see the LCD display turn on.

Now let's rinse the inside of the machine.

- Get a cup or bottle larger than 300ml (10oz) and place it under the funnel.
- Press the "ml/oz" button on the control panel repeatedly until the LCD screen says "300ml (10oz)".
- Now press the "water only" button on the control panel. The Formula Pro® Advanced WiFi will dispense 300ml (10oz) of water.
- Dispose of the water dispensed, or use it to water your plants.

Now you can turn off and unplug the machine, remove all the parts shown on the next page and set-up your new Formula Pro® Advanced WiFi

- Get familiar with the part names on the next page, then proceed with the set-up of the App on the following pages.

Formula Pro® Advanced WiFi - parts

Disassemble and wash all parts (except the base) and dry thoroughly.

Disassembly tip:



To remove the Stirring Wheel, grasp it as shown above & pull up while holding the powder container down.



⚠ Never clean the Powder Container in a dishwasher, sterilizer or microwave!




Download the Free Baby Brezza Formula Pro® Advanced WiFi App



Using the App

Open the app on your mobile device, then follow the steps to register your Formula Pro Advanced® WiFi, create an account, and connect the Formula Pro Advanced WiFi to your home network. After connecting to WiFi, you can set-up the machine, set-up bottles and use the app to control the Formula Pro Advanced WiFi.

App Home Screen

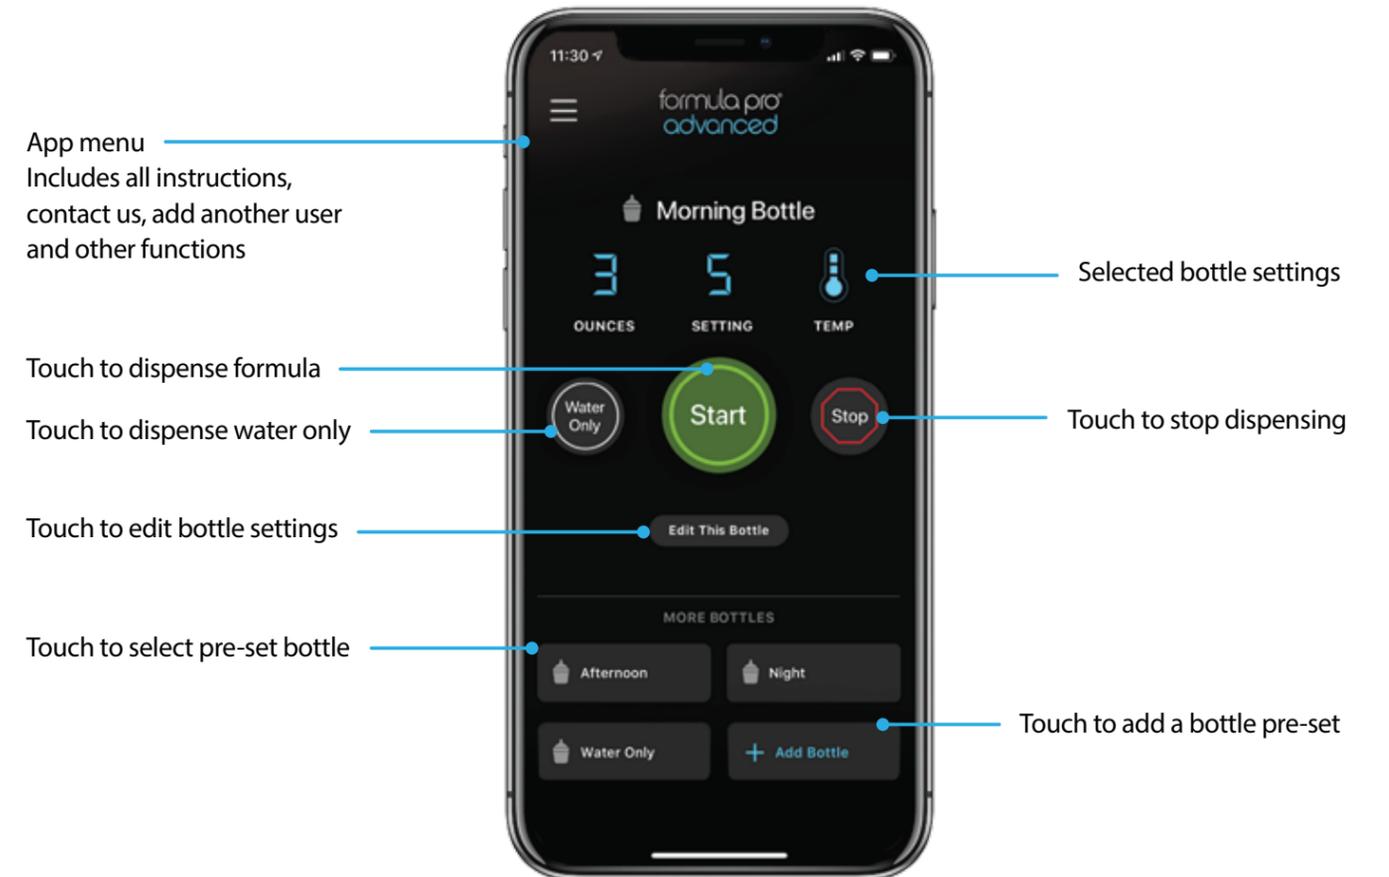

Tip: Follow the set-up and cleaning instructions on the app or on the following pages to use your Formula Pro® Advanced WiFi properly.

Formula Pro® Advanced WiFi set-up instructions


Set-up and cleaning videos available at elfe.com



After hand washing these parts, make sure they are all **completely dry** before assembly.



Assemble the **funnel & funnel cover**. Then insert funnel assembly into funnel compartment by sliding it up, then in.

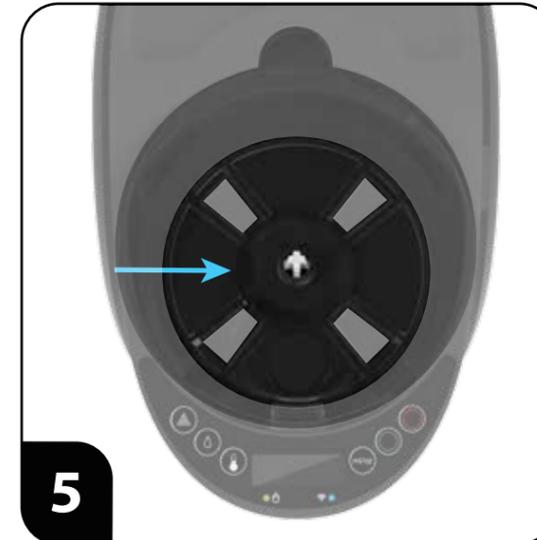

Place the **measuring wheel** into the powder container, fitting it over the axle with the flat side facing down. Make sure the holes in the measuring wheel are in the same position as shown above.



1. Place the front edge of **locking cover** in the recess in the inside/front of the powder container, **UNDER THE TAB**.
2. Fit hole in locking cover over top of axle. It will not lay completely flat.



Place the **axle** on the base as shown.



Now place the **powder container** on the base with the printed markings facing you.



Make sure the **locking cover & measuring wheel** look like this when assembled.



Now place the **stirring wheel** on the axle and push down firmly until you hear a **click**. Make sure the stirring wheel is snapped in place and does not lift up easily.

Now you're ready to add powder & make a bottle



1

Carefully pour formula powder into the powder container. Wipe up any spilled formula powder.



2

Make sure that the powder is filled between the MIN & MAX lines on the powder container.



3

Place the powder container lid on the powder container and turn clockwise until it stops.

This will engage the safety switch & lock the powder container onto the base.

To remove the powder container, turn the lid counter-clockwise.




4

Fit the drip tray on the base to fit your bottle height. Adjust it so the mouth of the bottle is as close to the funnel as possible.

Push the drip tray firmly against the base to set it in place

You can use the app to make a bottle or review the controls on the next page to make a bottle with the buttons on the machine.



Using the Formula Pro[®] Advanced WiFi control panel

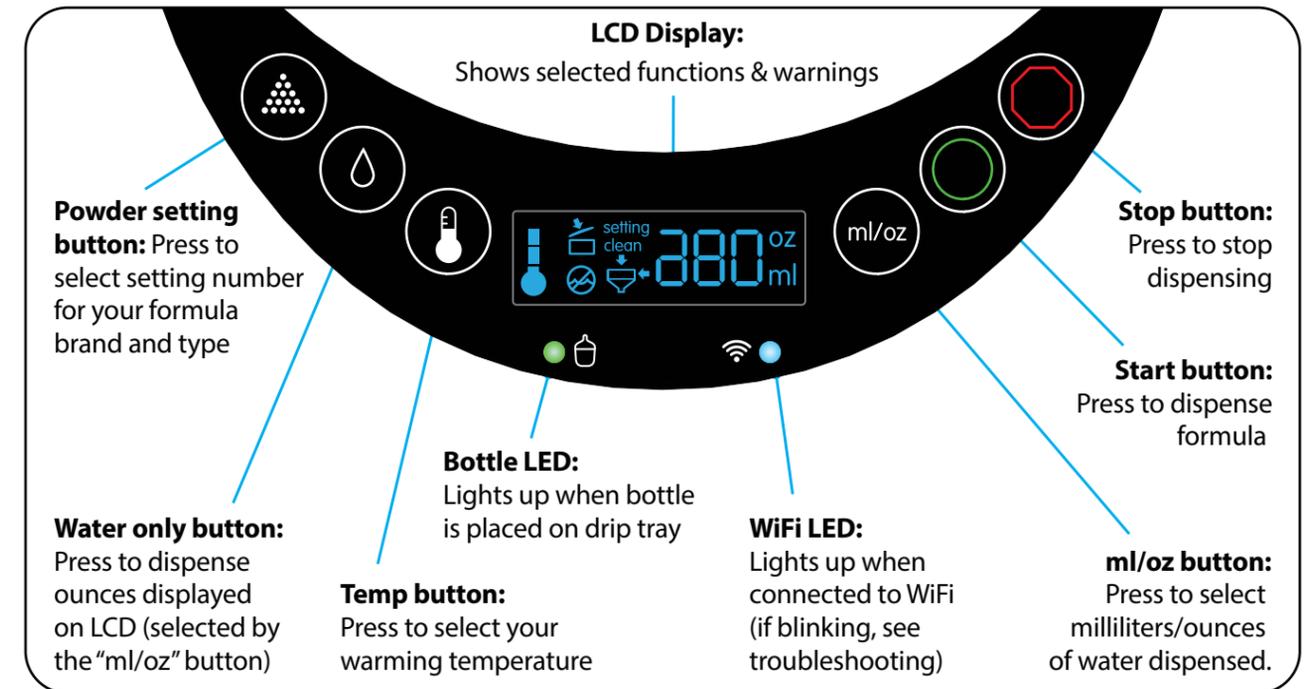

Temperature indicator symbols



Powder & water settings

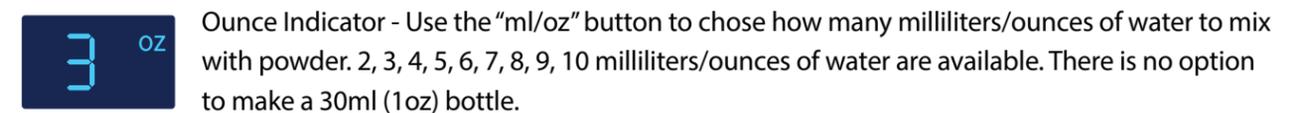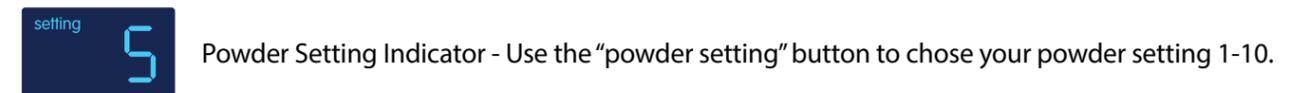


Warning symbols

The Formula Pro[®] Advanced WiFi will not run if any of these symbols are illuminated on the LCD display.

-  Powder Lid Open - The powder container lid is not closed completely or is not on the powder container correctly. Close the powder container lid completely and correctly when this symbol is illuminated.
-  Low Water - Refill water tank when this symbol is illuminated.
-  Clean Funnel - This symbol will illuminate after every 4 bottles are made. When this symbol is illuminated, remove funnel assembly, wash, and dry completely, then place it back into the base. See Page 11 for details.
-  Funnel Out - Funnel is removed or not inserted completely. Make sure the funnel is pushed all the way in when this symbol is illuminated.


Using the Formula Pro® Advanced WiFi control panel

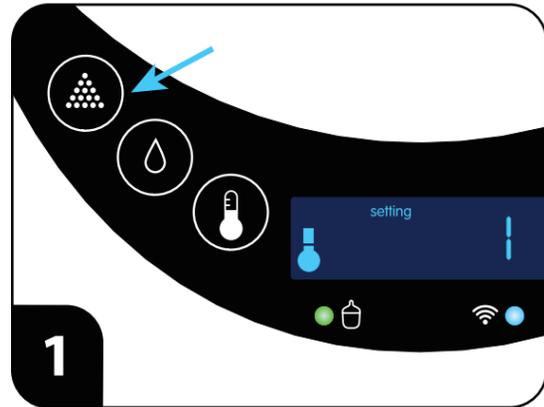

1 Press the “powder setting” button repeatedly to select your setting 1 - 10.


It is essential that you choose the correct setting for your formula brand and type.

Use the app or go to elfe.com to find the correct setting for your formula.

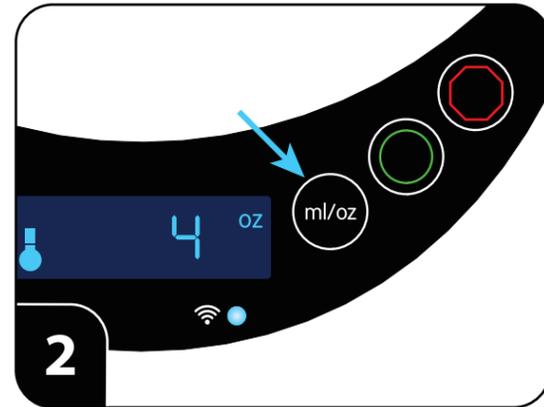

2 Press the “ml/oz” button repeatedly to select the milliliters/ounces of water you want to dispense.


Milliliter/Ounce size indicates water volume only. It does not include the volume of powder added when mixing.

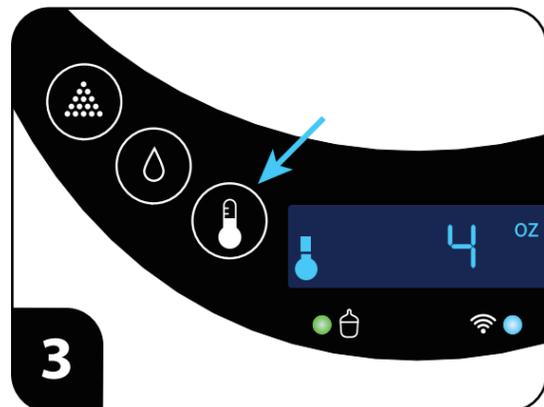

3 Press the “temp” button to select temperature.

- = Slightly warmer than body temperature
- = Body temperature
- = Room temperature

The temperature indicator will flash when heating and will stay solid when the set temperature is reached.

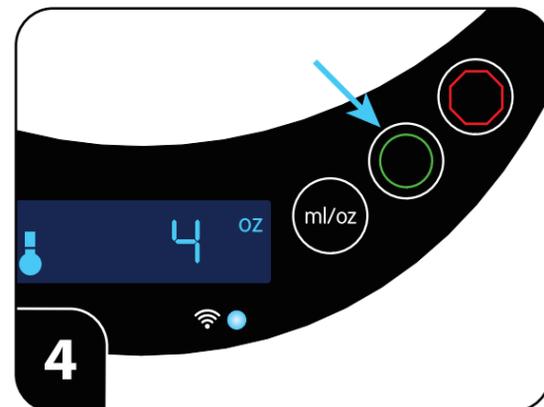

4 Press the “start” button to dispense formula.

The formula pro will remember the setting & milliliter/ounce size even if it is unplugged or turned off.

You do not need to select a powder setting every time you make a bottle.

You can always change the milliliter/ounce size or powder setting by pressing the buttons again.



5

The Formula Pro® Advanced WiFi will dispense powder & water together, then stop automatically when dispensing is complete.

Some clumping may occur with hypoallergenic formula and specialty formula powders that are inherently difficult to mix with water.



7

Check for clumps and shake or stir the bottle if necessary. Check temperature and feed your baby.



6

Check the level of mixed formula.

PLEASE NOTE: The level will appear higher than the milliliter/ounce size selected because of added powder volume and/or variance in bottle markings.

Example: 120ml (4oz) of water plus powder volume is approximately 135-140ml (4.5-4.75oz) depending on your formula powder type.



IMPORTANT

Refill the powder when the arms of the stirring wheel become visible. This is very important for accurate formula measuring.

Easy Daily Cleaning Instructions

It is **EXTREMELY IMPORTANT** to clean the funnel after every 4 bottles made. This will keep your Formula Pro® Advanced WiFi dispensing accurately.

Always make sure Funnel & Funnel cover are **COMPLETELY DRY** before re-assembling.



Remove Funnel & Funnel Cover by pulling out and down.



Wash Funnel & Funnel Cover with warm, soapy water & rinse well. **Dry completely before re-installing.**



Wipe the powder-dispensing hole on the underside of the powder container using a dry paper towel or soft dry cloth.



Suggestion to make cleaning easier
To make daily cleaning even easier, you can purchase an extra funnel & funnel cover on **elfe.com** Then you can swap the spare funnel with the funnel that needs to be cleaned.
NOTE: you will still need to wipe the powder dispensing hole as shown in Step 3.

PLEASE NOTE: You **don't** need to remove the powder container or the powder container parts for daily cleaning.

Monthly Cleaning Instructions

Once a month, give your Formula Pro® Advanced WiFi a thorough cleaning.

Please watch set-up and cleaning videos at **elfe.com**



Hand-wash all parts shown above with warm soapy water, rinse well and dry thoroughly.



Hand wash water tank with warm soapy water, rinse well and dry thoroughly.

Monthly Descaling Instructions

You can leave the formula powder in the powder tank during the descaling process.

To prevent mineral scale on the water heater inside your Formula Pro® Advanced WiFi, follow these easy steps:

1. Remove the water tank, empty it and fill it with 600ml (20oz) distilled vinegar & 600ml (20oz) of purified water.
2. Place the water tank on the base of the machine & place a cup larger than 300ml (10oz) under the funnel.
3. Select 300ml (10oz) with the "ml/oz" button, then press the "**water only**" button to dispense.
4. Empty the cup, place back under the funnel, then press the "water only" button again to dispense another 300ml (10oz).
5. Now unplug the machine, remove the water tank, and empty it. **Let the machine sit for 4 hours.**
6. Wash, rinse and fill the water tank to the max line with purified water, then place it back on the base.
7. Plug in the machine, place a cup to catch 300ml (10oz) water and use the "water only" button to run an 300ml (10oz) cycle. Dispose of the water dispensed in the cup and then repeat this step to run the entire tank of purified water through the machine. When the "Low Water" indicator turns on, you're done rinsing.
8. Refill the water tank with purified water and return to normal use.

Long Term Storage Instructions

It is **EXTREMELY IMPORTANT** to clean the machine and remove all formula powder residue before storage.

If you're going to store your Formula Pro® Advanced WiFi for later use, or will not use it for a while, please follow the instructions below:

1. Remove the powder container parts, funnel, funnel cover, drip tray and water tank from the base.
2. Wipe the base with a clean damp cloth and make sure to remove any and all formula residue. Dry the base well.
3. Empty the powder container, wash all powder container parts, dry thoroughly, reassemble, & reinstall on the base.
4. Follow the Monthly Descaling Instructions on page 12, steps **1-7 only**. Do not remove or refill the water tank after step 7.
5. Now place a cup to catch 300ml (10oz) water under the funnel, then **press & hold** the "water only" button for 5 seconds. Water will dispense continuously until the machine is completely empty, then stop automatically.
6. Unplug the machine, remove the funnel, funnel cover and water tank, dry them both thoroughly and reinstall them on the machine.
7. Your machine is now ready for storage. Pack the machine in its box, or enclose it in a bag to keep it dust free.

Error Codes

In the unlikely event of electrical component error or interruption during operation, the following codes will be displayed on the LCD screen. Pressing and holding the stop button will clear the code and operation should return to normal. If the code returns or is unable to be cleared, please contact Baby Brezza Customer Service.



Indicates an operation error of the motor that turns the powder container parts. Contact Baby Brezza Customer Service.



Indicates an operation error of the motor sensor that detects the rotation of the measuring wheel. Contact Baby Brezza Customer Service.



Indicates an operation error of the water flow meter that measures the water volume output. Contact Baby Brezza Customer Service.



Indicates an operation error of the temperature sensor that measures water temperature. Contact Baby Brezza Customer Service.



Indicates an operation error of the water level switch that measures the water remaining. Contact Baby Brezza Customer Service.



Indicates that hot water has been poured into the water tank and entered the machine. Empty the water tank, refill it with room temperature water, return it to the base. Press & hold the stop button to clear the code, then press & hold the "water only" button to clear the hot water from the machine.



Indicates that the powder container lid has been opened during operation. Make sure the powder container lid is completely closed, press & hold the stop button to clear the code. The machine will return to normal.



Indicates that the funnel has been removed during operation. Make sure the funnel & funnel cover are installed correctly, press & hold the stop button to clear the code. The machine will return to normal.

Troubleshooting

Condition	Possible Cause	Possible Remedy
Machine will not start.	Machine is unplugged.	Make sure the plug is securely inserted into the power outlet.
	Funnel is removed or not fully inserted.	Insert funnel or push front of funnel until flush with machine.
	Water level is below "MIN" line.	Add more water to water tank.
	Powder container is removed or not fully seated.	Make sure powder container is placed on base properly.
	Powder container lid is not completely closed.	Turn Powder container lid clockwise to close completely. See page 7, step 3 for details.
	Water in Water Tank is too cold. (Temp Symbol on LCD Flashing)	Wait for water to warm up.
	Water in Water Tank is too hot. (Temp Symbol on LCD panel is flashing)	Wait for water to cool down.
Temperature of dispensed formula is too cold.	Water has not yet been heated to correct temperature.	Wait for heater to warm water. Make sure selected temperature symbol stays on solid instead of flashing.
Funnel will not fit all the way in Funnel Compartment.	Funnel cover is not straight on funnel and/or not pushed down completely.	Align tab on front of Funnel Cover with notch in Funnel and push down Funnel Cover completely.
Clean Funnel symbol is on, Formula Pro beeps when start button is pressed.	Funnel and hole on underside of Powder Container require cleaning.	Follow Steps on Page 7 to clean and dry Funnel and hole on underside of Powder Container.
Too much powder dispensed.	Locking cover is not installed correctly.	Check locking cover and make sure the front edge is locked under the tab in the powder container. See page 4, step 6 for details.
	Incorrect powder setting selected.	Make sure to select the correct setting number for your powder type. For details, go to: elfe.com
Not enough powder dispensed.	Powder level in powder container is too low.	Refill Powder Container with more powder.
	Machine has not been cleaned well.	Disassemble, clean by hand-washing, completely dry all parts and reassemble.
	Silicone scraper is not installed correctly.	Make sure silicone scraper is installed correctly.
	Incorrect powder setting selected.	Go to: elfe.com to confirm setting for your powder brand and type, then choose correct setting using the "powder setting" button on the control panel.
Not dispensing water.	Water Tank not fully seated.	Push Water Tank down all the way on Base.
Powder build-up on funnel cover & underside of powder container.	Frequent use without cleaning underside of powder container. See page 7, step 3 for details.	Clean funnel, funnel cover and underside of powder container every 4 bottles.
No connection to Formula Pro® Advanced WiFi from app.	Wifi and/or Bluetooth on mobile device is off.	Turn on WiFi and Bluetooth on mobile device to regain connection.
Blinking Blue WiFi LED on Formula Pro® Advanced WiFi control panel.	Connection error.	Unplug Formula Pro® Advanced WiFi from power supply, wait 10 seconds, then plug in Formula Pro® and wait for WiFi LED on control panel to light up without blinking.
	Formula Pro® Advanced WiFi requires connection reset.	With The Formula Pro® plugged in, hold "temp" button for 10 seconds to reset Wifi. Restart the app on your mobile device and follow steps in-app to reconnect your Formula Pro® to WiFi.

If you can not remedy problems by using the troubleshooting chart above, do not return your Formula Pro® Advanced WiFi to the store. Please contact Baby Brezza Customer Service at 1-800-667-8184 or email at: service@elfe.ca.